




## Programming Quick Guide

### - FS5020ML

#### Installation

Make sure that the scanner has the correct cable to plug in the PC as below described:

**\*Note :** Please install PL-2303 driver for USB serial

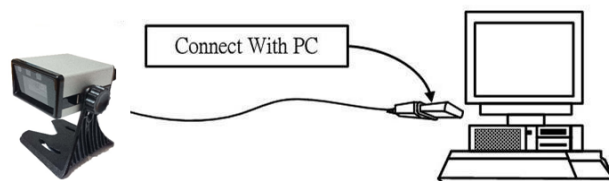

#### Reset Configuration to Default :

If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan A1 for USB HID or B1~B2 for RS232 or USB Serial. This will reset the scanner to its factory defaults.



**\*Note :** Please install PL-2303 driver for USB serial

## Keyboard Country (FOR USB HID Only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States: @ | \$ # { } [ ] = / ' \ < > ~



USA  
(Original setting)



Italy



Portuguese (Brazil)



German



France



Spanish



Portuguese (Portugal)

## 1D Symbolologies – 1



CODABAR



CODE 39



Interleaved  
25



Industrial  
25



## 1D Symbolologies – 2



Matrix 25



CODE 128



GS1-128



UPC-A



UPC-E




EAN 8



EAN 13



## 1D Symbolologies – 3

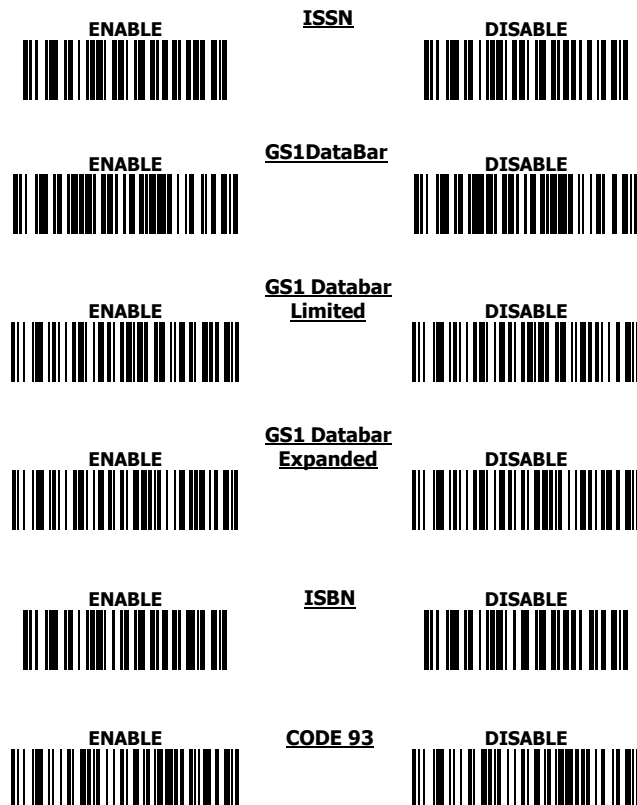

## 2D Symbolologies



- Information in this document is subject to change without notice.
- For more information, please visit:  
[www.riotec.com.tw](http://www.riotec.com.tw)