


Programming Quick Guide

-LS6300J/ FS5020J

Installation

Make sure that the scanner has the correct cable to plug in the PC as below described:

***Note :** Please install PL-2303 driver for USB serial

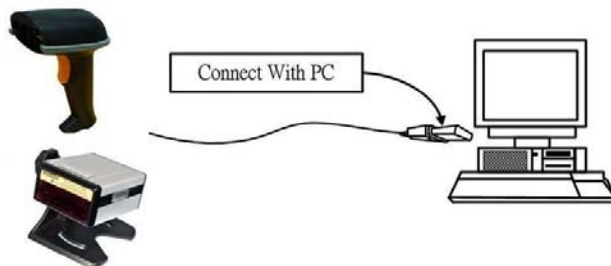

Reset Configuration to Default :

If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan A1 for USB HID or B1~B2 for RS232 or USB Serial. This will reset the scanner to its factory defaults.




***Note :** Please install PL-2303 driver for USB serial

Keyboard Country (FOR USB HID Only)


Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States: @ | \$ # { } [] = / ' \ < > ~




1D Symbolologies – 1

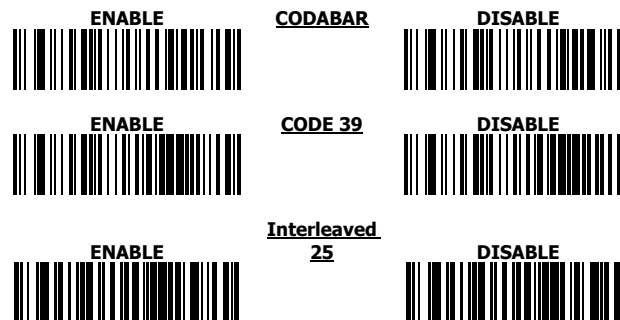

1D Symbolologies – 2

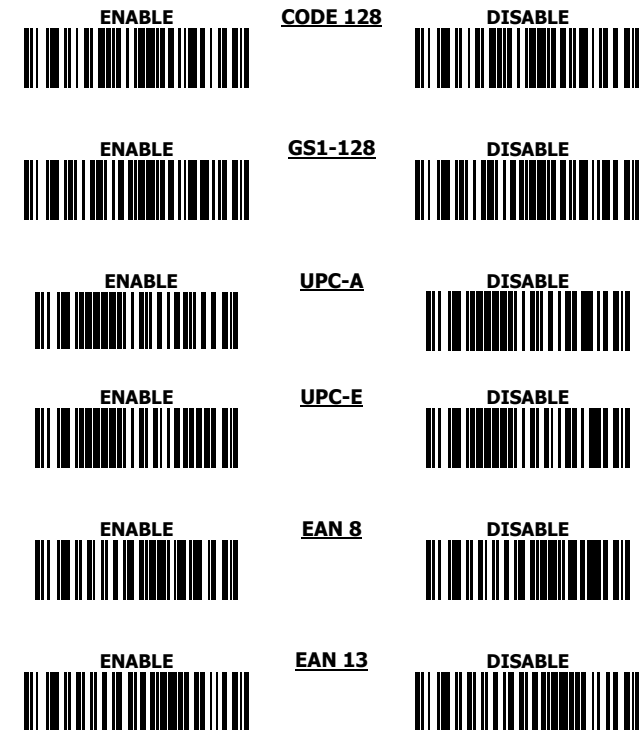

1D Symbolologies – 3

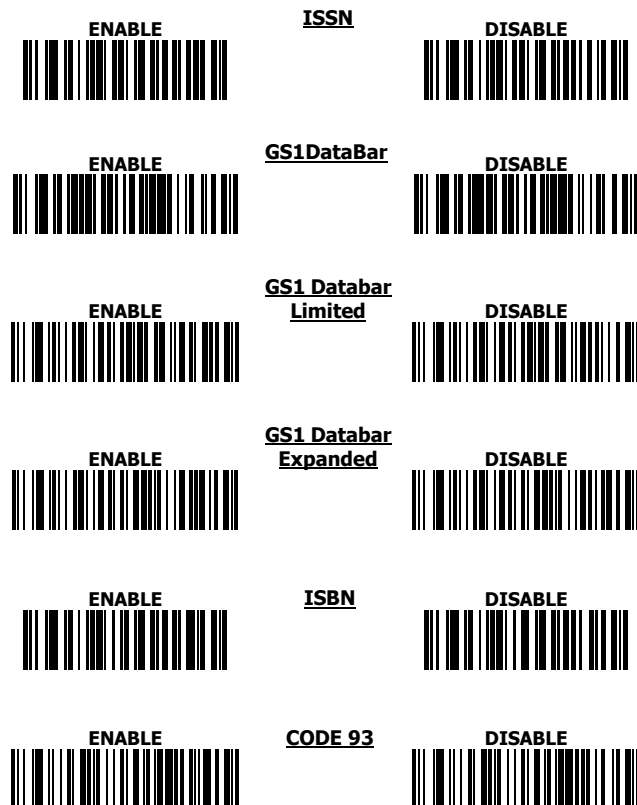

2D Symbolologies



- Information in this document is subject to change without notice.
- For more information, please visit:
www.riotec.com.tw